


# Quick Reference Guide -

## Electronic Oven Programmer

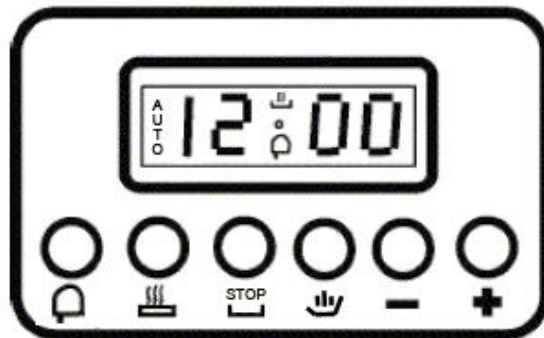

Minute Timer - Countdown



Manual Mode | Stop



Automatic Timer - Start



Minus






Automatic Timer - End


 



Plus

### Setting the Time:




 


Press the  and  button at the same time, then press the  to set the time. The clock is a 24-hour display. The correct time must be set for automatic operations.

### Setting the Minute Timer (Countdown):


Press the  button, set the required time by pressing . To check the remaining time press  and the remaining time will be displayed. When the buzzer sounds press any key to silence it.

### Setting the Automatic Timer:

Select the required oven function and temperature.

Press the  button, set the required start time by pressing  buttons. Then press the  button and set the required finish time by pressing  buttons. AUTO will be displayed and the  symbol will be displayed when the oven starts its cooking time. To return the oven to manual mode press the  button.

### Setting the Buzzer Volume:

The clock has three preset volumes, to change the setting hold the  button until the desired volume is selected.