

How to keep your EuroKera cook-top looking brand new

Your EuroKera cook-top is made of an extraordinary material : glass ceramic.

- It is tough, much tougher than the glass it resembles. Nevertheless, do not stand on it in order to repair a light and do not drop a heavy object from the top of the kitchen unit above !
- It is resistant to heat and cold and even to extreme temperature changes. You can pour cold water onto a cooking zone without causing any damage.
- It is attractive and easy to clean.
It will remain so if you take a few precautions and follow our advice.


Precautions to be taken when using your EuroKera cook-top

- Before using your cook-top, check each time that the bottom of the saucepan and the cooking zone are clean and dry.
- Lift up the saucepans ; sliding them across the cook-top can lead to superficial scratches.
- Avoid peeling vegetables over the cook-top as this could lead to grit on the surface and subsequent scratching.
- Use saucepans which are large enough to avoid spillage onto the cook-top, especially if a saucepan contains any sugar as this can cause irreparable damage to the glass ceramic.
- Keep the surface of the cook-top clear ; above all do not keep plastic or aluminium packing on it which could melt and damage the cook-top.

Cleaning instructions

Each and every stain or deposit on the cook-top surface must be cleaned off quickly once the cook-top has cooled down, before re-using the cook-top.

Exception: In the case of sugar deposits, remove all residues before the cook-top cools down (Be careful not to burn yourself!).

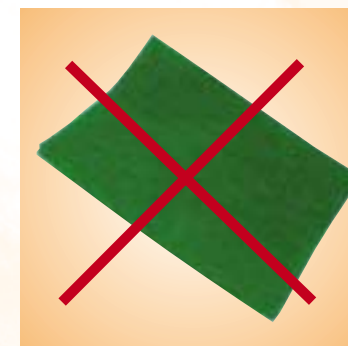

Important: Only use cleaning products that have been specifically designed for glass ceramic cook-tops.



If the deposit is minimal, simply wipe off with a dry cloth.



If the deposit is more important, clean off with a moist, soapy sponge and rinse off.



If the deposit does not clean off easily, use a non-abrasive scratch pad and a specially adapted glass-ceramic cleaning product.



If the deposit does not clean off with any of the above mentioned methods, use a razor blade scraper, specially designed for glass-ceramic cook-tops.



Having successfully cleaned the cook-top, apply a glass ceramic cook-top conditioner which will protect the cook-top surface against any future stains, with a dry cloth or equivalent.